


**O2-Analyser system consisting of probe and electronic unit
ENOTEC Order no.: ENS-700_ 0100001000**


Operation: ENOTEC Remote App,
Digital input

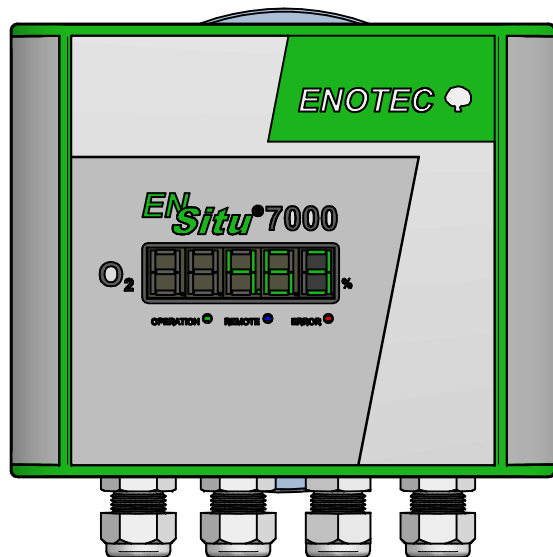

Max. ambient temperature:
-40°C+70°C


Electronic unit SME-7000
IP66 / NEMA 4X

Mating flange
(Option)

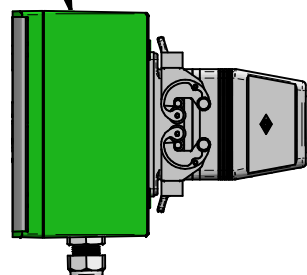

Duct wall

Flue gas duct

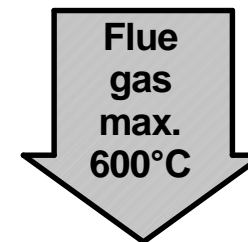

InSitu Measuring probe KES-700X

-3° to -5°

Flange connection complies
DN65/PN6

Isolation:
Customer

Max. Cable length (1)
50 Meter

ATTENTION:
Please specify all flue gas data in the
ENSITU 7000 questionnaire. With complete
flue gas data the best probe configuration
can be guaranteed.

Please mind, that all equipment will be easily
accessible at any time.

ENOTEC
Customer

- 1: Power supply 48V DC , 5A max.
Option: Power adapter from ENOTEC
ENOTEC Ord. no.: ENS-70000000000010
- 2: In- and Output signals (analog and digital)
- 3: Testgas in

EN 1 ENSITU® 7000 System configuration : Electronic unit at the probe