



# OilGuard 2 W

## Oil trace monitor for water treatment



### Applications

- Monitoring oil traces in raw water
- Monitoring oil traces in surface water
- Monitoring oil traces in process and waste water

### Industries

- Drinking water treatment
- Waste water treatment
- Industrial waste water

### Advantages

- Proven UV fluorescence measuring principle
- True non-contact free-fall measurement and thus extremely low maintenance
- Re-calibration with secondary standard
- Measurement also possible in turbid water
- Convenient operation via colour touchscreen display
- Display of values and / or graphs visualizing the measurements of the past month
- Correlates with all internationally acknowledged reference methods

# OilGuard 2 W

Oil trace monitor for water treatment

## Innovations with tangible benefits



### Non-contact free-fall measurement

The OilGuard 2 W detects oil traces in a free-falling stream that eliminates contact between the water and the optics.

- There are no reading falsifications resulting from window soiling.
- Low and high values can be measured precisely.
- The measurement of the complete sample stream provides a representative result.
- There is an extremely low need for maintenance.



### Extremely high resolution

The ingenious instrument design of the OilGuard 2 W in combination with the high quality of its optical components minimizes the effect of interferences. Thus, even the smallest traces of oil can be detected.

- A stable measurement below 1 µl (ppb) is possible.
- A stable zero point guarantees the long-term stability of the measurement.



### Adjusting the instrument to customer specific oils

The instrument can be adapted to various types of oil to meet customer requirements.

Checking the instrument is easy with corresponding solutions.

The instrument's factory setting is calibrated with 16 EPA-PAH standard. The OilGuard 2W can be recalibrated by the customer with a secondary standard (solid reference) which allows an exact recalibration without 16 EPA- PAH.



### Integrated control unit

The OilGuard 2 W has a touchscreen with colour display.

- Values, graphs, states or alarms can be displayed, respectively.
- An internal data logger allows the visualisation of the measured data covering the past 32 days.



photometer.com/oi2w

Your representatives:

## Technical data

### Technical data

Measuring principle: UV fluorescence  
Light source: LED 280 nm  
Measuring span: 0 .. 50 µg/l (ppb)\*  
0 .. 500 mg/l with specific oil calibration

Measuring ranges: 8, freely programmable  
Resolution: 0.01 µg/l (ppb)\*  
Detection limit: <0.1 µg/l (ppb)\*

Sample temperature: 0 .. +40 °C  
Ambient temperature: -10 .. +50 °C  
Ambient humidity: 0 .. 100 % rel.  
Protection: IP54

Power supply: 18 .. 30 VDC,  
optional:  
100 .. 240 VAC, 47 .. 63 Hz  
Power consumption max: 8 W


### Installation

Sample inlet / drain: Tube connection inside  
Ø 12/25 mm  
Sample flow: min. 3 l/min, unpressurized  
Sample inlet / drain: SS 316 L/ PVC

\*Calibration with 16 EPA-PAH standard

### Control unit

Display: 1/4 VGA, 3.5"  
Operation: Touchscreen  
Output: 2 x 0/4 .. 20 mA, galv. isolated  
2 x relay 250 VAC, 4A  
Input: 1 x for option. flowmeter  
2 x 0/4 .. 20 mA  
Digital interfaces: Ethernet, Modbus TCP, SD card  
Optional: Profibus DP, Modbus RTU

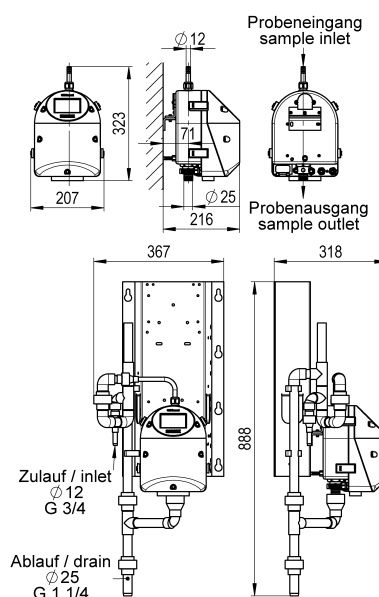

**SIGRIST**  
PROCESS-PHOTOMETER

SIGRIST-PHOTOMETER AG

Hofurlistrasse 1 · CH-6373 Ennetbürgen  
Tel. +41 41 624 54 54 · Fax +41 41 624 54 55  
www.photometer.com · info@photometer.com